




# JOSEPHINA




PLEASE READ BELOW INSTRUCTIONS PRIOR TO SWITCHING MACHINE ON

## MACHINE COMPONENTS

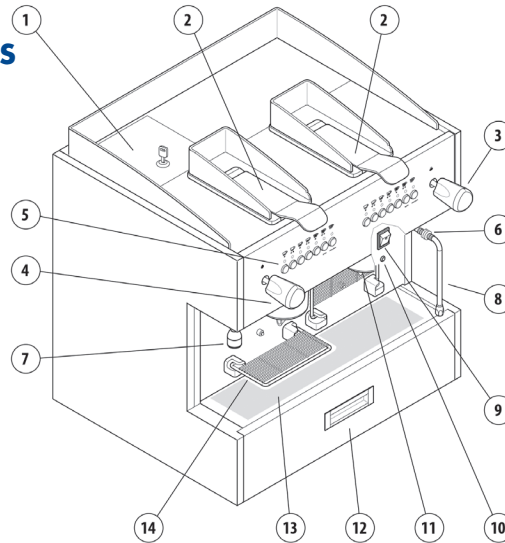

1. Internal water tank door
2. Coffee unit lever
3. Steam knob
4. Water knob
5. Push button panel
6. Anti-burn rubber
7. Hot water nozzle
8. steam nozzle
9. Main switch
10. Boiler level light sensor
11. Dispensing nozzle
12. Used pod drawer
13. Cup rest grille
14. Cup raising grille

## KEYPAD

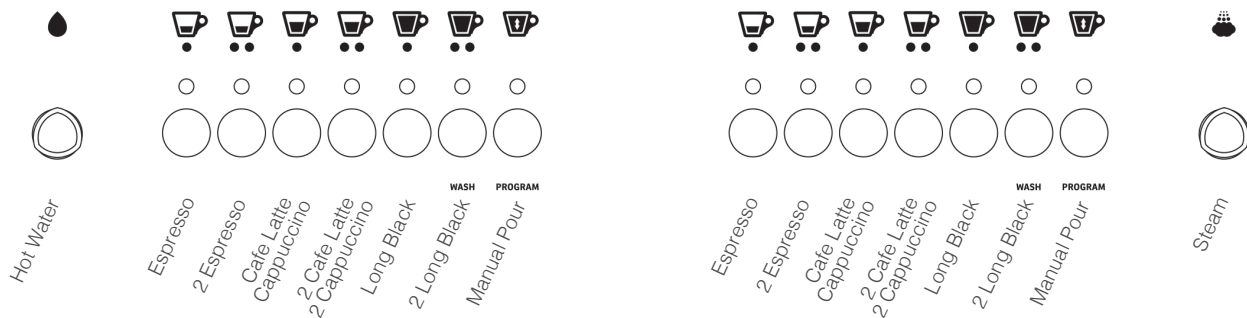

The machine will **only work with Lavazza BLUE coffee capsules**. If you attempt to use any other product the machine will be **damaged and cease to work**.

## COFFEE SELECTIONS:



Coffee selections with a "2" require use of a **double coffee capsule**. These capsules can be identified by the number "2" printed on the foil top.

### 2 Espresso / 2 café latte / 2 cappuccino

By using the double capsule with these selections you can make either 2 regular cups or a large cup.

### 2 long black

By using the double capsule with this selection you can make a large long black.

## POURING COFFEE:


1. The machine is ready to make coffee when all LEDs on the control panel are lit;
2. Raise lever on left or right side, insert capsule, and lower the lever;
3. Place cup under spout;
4. Make your coffee selection from the buttons detailed above;
5. The associated light will come on and all others will go off;
6. When the coffee stops pouring and all the selection lights come back on, raise the lever;
7. Take your coffee.

## HEATING MILK:

1. Place required amount of milk into stainless steel jug;
2. Insert steam wand into jug just below milk level, open steam tap, using thermometer steam milk to correct temperature and consistency;
3. Remove wand from jug, wipe wand using a damp cloth and open steam tap for 2 seconds (with nozzle facing towards drip tray), this will ensure that the steam wand is left clean for the next user. Failure to do this will cause contamination of the boiler.




# JOSEPHINA

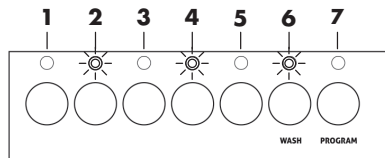

Button Reference


## EMPTYING THE WASTE BASKET: LED 2 & 4 FLASHING

1. After the machine has used 15 coffee capsules on each side, it will be necessary to empty the waste container; the machine will prompt for this by flashing the LEDs 2 and 4 on both sides;
2. Pull out waste container (12), remove used capsules; also empty the liquid waste from item (13);
3. When LEDs 2 and 4 begin to flash at a faster rate insert waste trays to continue

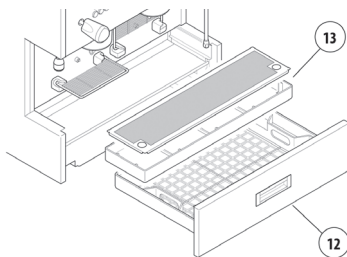

## WATER TANK EMPTY WARNING: ALL LEDS FLASHING FAST

1. When the built in water tank becomes empty all LEDs on both sides will blink at a fast rate;
2. Lift the metal lid (1) on the top of the machine and remove the plastic tank cover, using a jug pour clean cold water into the tank observing the max fill level marked upon the tank;
3. Replace the plastic tank cover, close the tank lid.
4. Where possible, always used filtered water.

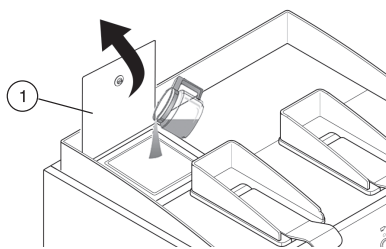

## CLEANING THE BREW UNITS: LED 6 FLASHING

1. After each brew unit has processed 100 Coffee capsules the machine will prompt for a brew unit wash by flashing button 6 at a fast rate;
2. Fill water tank to max level, Place a jug under the spouts corresponding to the brew unit to be washed;
3. Raise and lower the associated lever;
4. Hold down button 6 for 5 seconds or until the associated led goes off;
5. **Within 10 seconds** press button 6 again, the machine will now begin to flush and button 6 will flash;

View Video:



6. When the flushing has completed press button 6 again, an additional wash will occur then machine will reboot and become ready for use.
7. This cleaning process does not need to be done immediately, it can be completed at a more convenient time if required.

## MACHINE HEATING: ALL LEDS FLASHING LEFT TO RIGHT

1. When using machine, at times all LEDs will begin to flash in sequence from left to right, this means that the machine is heating and cannot currently be used;
2. WAIT until it stops sequencing. The 2 sides of the machine can be used independently; if one side is heating you can still use the other side.

## WATER FILTER WARNING: LED 7 FLASHING

1. After the machine has consumed 150 litres of water it will signal for a water filter change by slow flashing of button 7 on both sides;
2. Australian versions of this machine use a soft in tank filter that needs to be replaced every 6 months and this has its own time based indicator stuck on the front panel of the machine;
3. So when you see button 7 flashing just press button 1 on the Right hand panel, it should flash 3 times signalling that the signal has been reset.

View Video:



## DESCALING: LEDS 3 & 6 FLASHING

1. After 900 litres of water have passed through the machine it will signal that descale is required by flashing buttons 3 and 6 on both panels slowly. It is still possible to use the machine but to ensure continued reliable operation it is recommended to perform the descale routine as soon as possible.
2. Place a large jug under each group and ensure both levers are down, switch off machine.
3. Remove water tank from machine using wire handle. Empty contents of water tank and remove water filter from tank.
4. Dissolve the contents of 1 sachet of Descaler (Supplied by Blue Pod upon request) into 1 litre of clean room temperature water inside the water tank.
5. Insert water tank into machine observing correct orientation (red marking on front of tank indicates the front side)
6. Turn on machine whilst holding down button 3 on the Right hand side keep button 3 held down until the all LEDs come on except 3 and 6. Press button 3 on right hand side within 10 seconds to initiate descale.
7. The machine will make 5 water deliveries pausing for 15 seconds between each, and then pause for 5 minutes, after this period the LEDs 3 and 6 will begin to blink at a fast rate.
8. Remove any surplus descale liquid from the tank and replenish with clean water at room temperature to the max level, refit the water tank filter. Press button 3 on Right hand side to begin the rinse.
9. When Descale is complete all LEDs will illuminate and the machine will be ready for further use.

**PLEASE SWITCH MACHINE OFF IF NOT IN USE  
OVERNIGHT OR ON WEEKENDS**